


Drill bushes with head

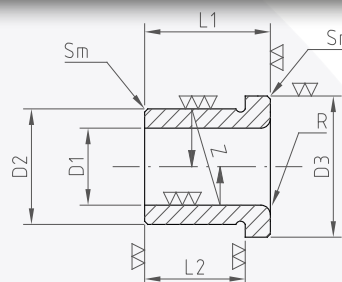

Esempio di ordinativo con nostro codice
Example of purchase order using our code

Bussole DIN 172C - L DIN 172C - L bushes	Codice Code	Materiale Material	Misure Measures
∅ 4.75	3BUDI	172C	0475
∅ 30	3BUDI	172L	3000



MADE IN ITALY

D1 F7	Step	D2 n6	D3	CORTO / SHORT			LUNGO / LONG		
				L1	L2		L1	L2	
2 - 2.6	0.1 0.25	5	8	6	4	•	9	7	•
2.7 - 3.3		6	9	8	5.5	•	12	9.5	•
3.4 - 4		7	10			•			•
4.1 - 5		8	11	•	•				
5.1 - 6		10	13	10	7	•	16	13	•
6.1 - 8		12	15			•			•
8.1 - 10		15	18	12	9	•	20	17	•
10.1 - 12		18	22			•		16	•
12.1 - 15		22	26	16	12	•	28	24	•
15.25 - 18		0.25	26	30	20	15	•	36	31
18.25 - 22	30		34	•			•		
22.25 - 26	35		39	•			•		
26.25 - 30	42		46	•	•				
30.25 - 35	48		52	25	20	•	45	40	•
35.5 - 42	0.5	55	59	30	25	•	56	51	•
42.5 - 48		62	66		•	•			
48.5 - 55		70	74	•	•				
56 - 63		1	78	82	35	29	•	67/72	61/66