

Bussole con guida extralunghe

DIN 179 DIN 172


Drill bushes with extra long guide

MADE IN ITALY



Esempio di ordinativo con nostro codice
Example of purchase order using our code

Bussole DIN 179 XL -172 XL DIN 179 XL - 172 XL bushes	Codice Code	Materiale Material	Misure Measures
ø 2.75	3BUDI	179XL	0275
ø 18	3BUDI	172XL	1800

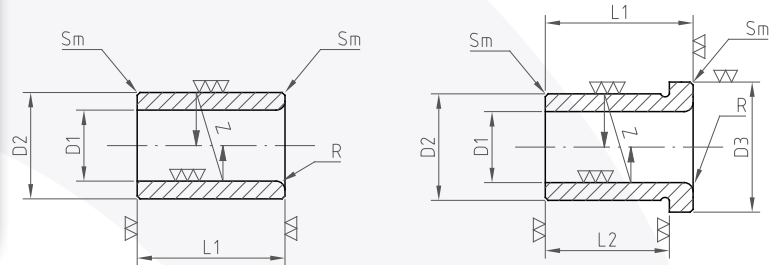

D1 F7	Step	D2 n6	D3	L1	L2	179	172
2.7 - 3.3	0.1 0.25	6	9	16	14.5	•	•
3.4 - 4		7	10			•	•
4.1 - 5		8	11			•	•
5.1 - 6		10	13	20	17	•	•
6.1 - 8		12	15			•	•
8.1 - 10	0.25	15	18	25	22	•	•
10.1 - 12		18	22		21	•	•
12.1 - 15		22	26	36	32	•	•
15.25 - 18	26	30	•			•	
19 - 22	1	30	34	45	40	•	•
23 - 26		35	39			•	•
27 - 30		42	46			56	51
35	48	52	•	•			
40	-	55	59	67	62	•	•
45		62	66		61	•	•
50 - 55		70	74		61	•	•
60		78	82		78	72	•